



TUTORIAL
AutoCAD OUTPUT

AutoCAD Output

DESCRIPTION



- Use the Output menu to share data with AutoCAD

GOAL

- How to select the AutoCAD settings
- How to copy data to AutoCAD
- How to import data from AutoCAD



Output – AutoCAD Settings Menu

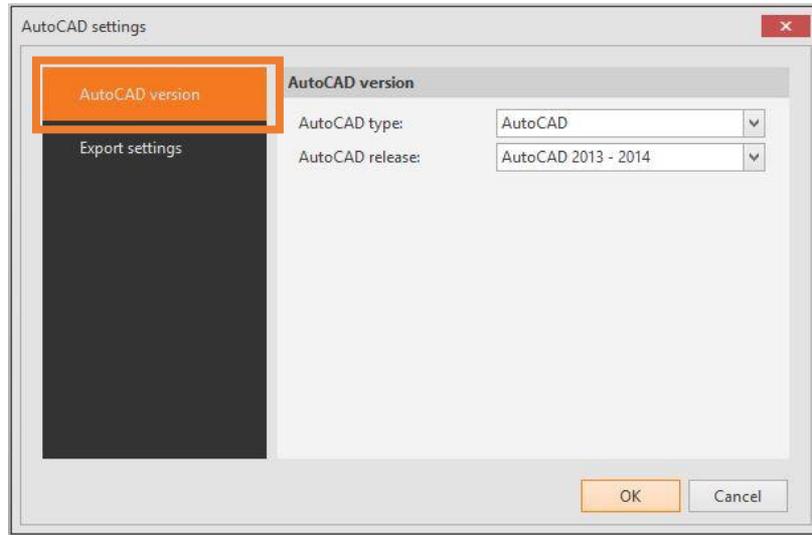
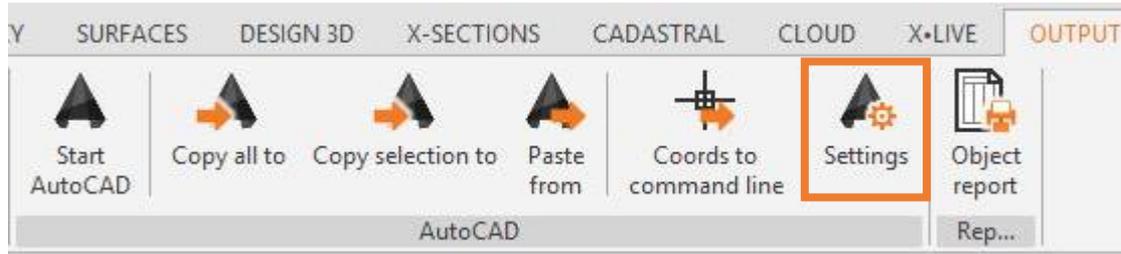


From **OUTPUT** menu select **SETTINGS**, the AutoCAD Settings windows will now appear, it is possible to select AutoCAD version options:

- AutoCAD type
- AutoCAD release



Output – AutoCAD Settings Menu

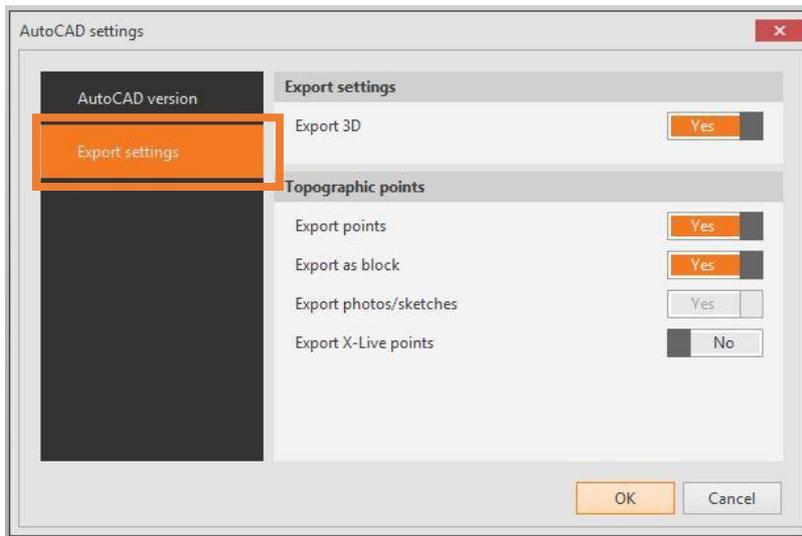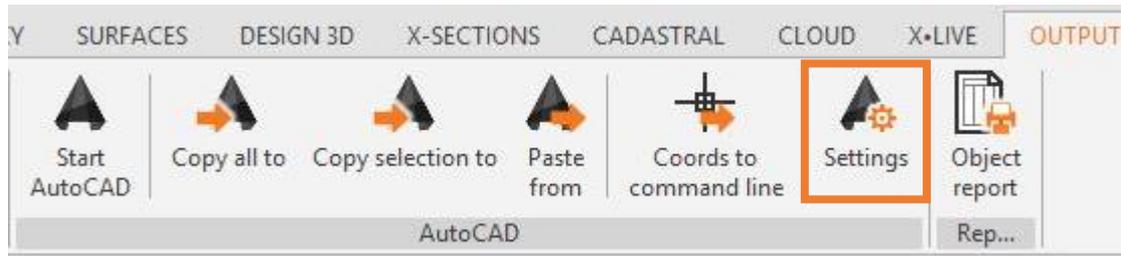


From **OUTPUT** menu select **SETTINGS**, the AutoCAD Settings windows will now appear, it is possible to select Export settings:


- Export 3D
- Topographic points options



Copy to AutoCAD

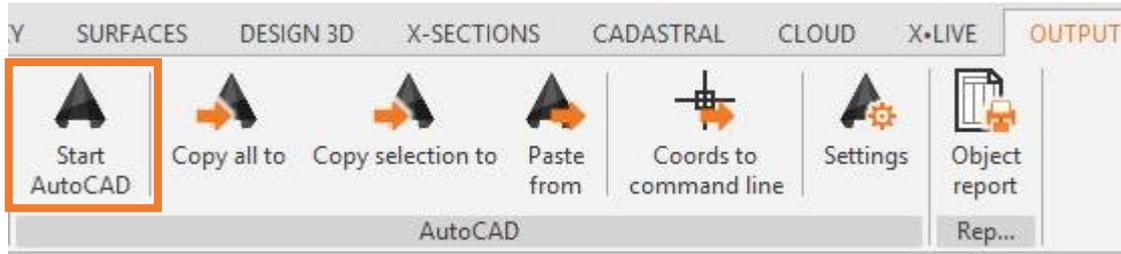


From **Start AutoCAD** it is possible to run AutoCAD or show it to front of the windows

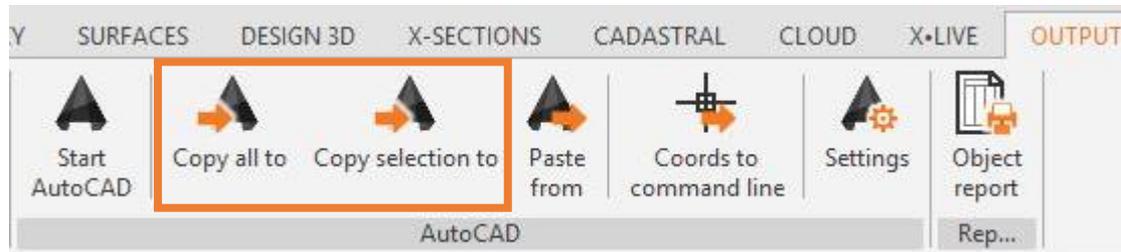

From **AutoCAD menu** it is possible to select **Copy all to** or **Copy selection to**, to copy visible entities from X-PAD Office Fusion to AutoCAD



Copy to AutoCAD

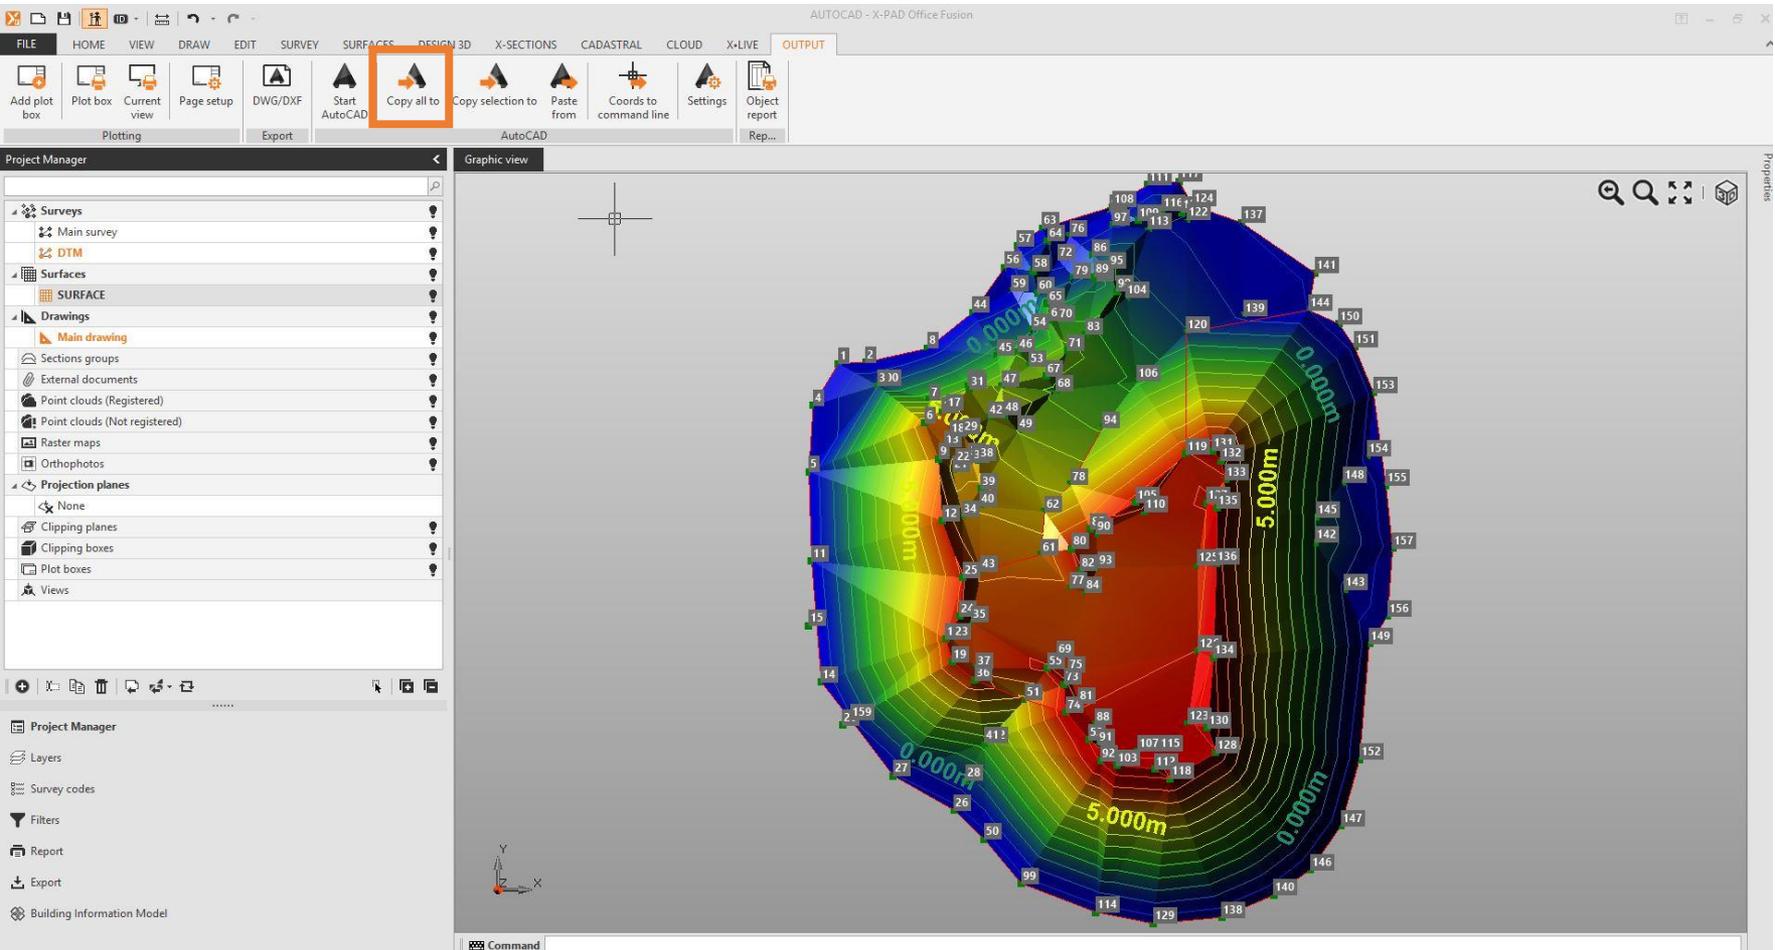

The screenshot displays the AutoCAD - X-PAD Office Fusion interface. The ribbon is set to the 'SURFACES' tab, and the 'Copy all to' button is highlighted with a red box. The main workspace shows a topographic map with contour lines and elevation markers. The map is color-coded by elevation, with red representing the highest elevation and blue representing the lowest. Contour lines are labeled with values such as 0.000m, 5.000m, and 10.000m. The map is overlaid with a grid of numbered points, ranging from 1 to 159. The interface includes a Project Manager on the left, a Command line at the bottom, and a Properties panel on the right.



Paste on AutoCAD

